




Sanitizing Booth

- User Manual

Specifications

- Powder Coated Steel
- Enclosed Cabinet (110 Volt Power Source)
- Disinfectant Solution Tank (100 Liters)
- 5,000 Cycles per Tank
- 20 Misting Nozzles
- Wheelchair Accessible
- Also Available in Aluminum
- 584 Pounds
- 4' Walkthrough Space

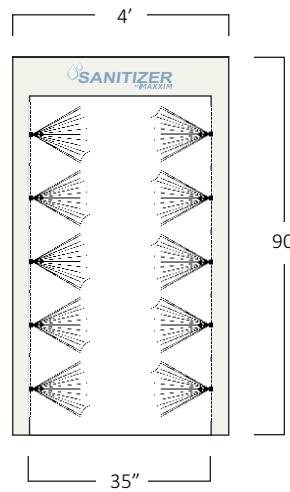


Cleaning & Maintenance

Daily:

- Wipe down internal and external surfaces of the cabin (walls, ceiling and floor) with antibacterial solution.
- Verify the levels of sanitizing solution in the tank, fill if necessary.
- Check the tubes and nozzles of the cabin sprinkler system.

Removal and cleaning of Nozzles:

In the case of a nozzle not functioning correctly it's necessary to remove and clean it. To do so simply unscrew the nozzle (a), disassemble the three pieces and carefully clean each piece (b). Before re-attaching the nozzle to the cabin you will need to activate the sensors once in order to drain the water (c), lastly re-assemble the nozzle and screw it back into the cabin (d). Hand tightening is sufficient.

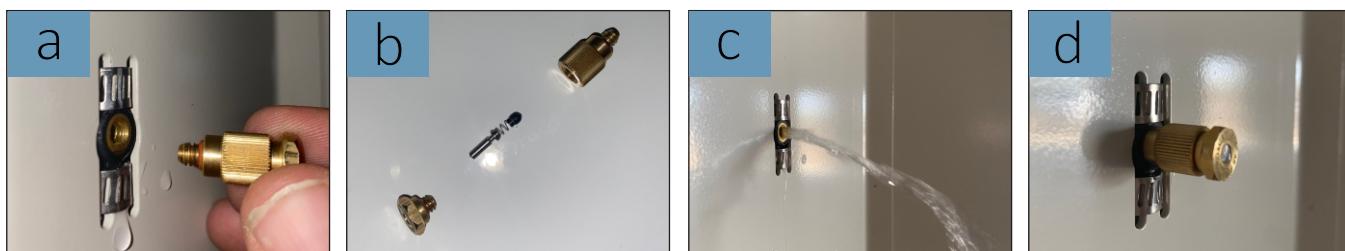


Refilling the Tank:

After refilling the tank it will most likely have air in the pressure line. In order to empty the lines of air hold in the prime button until all nozzles spray disinfection solution.



Replacing the Filter:

The filter should be replaced after every 6 months. To replace the filter simply detach it from the two tubes (a), then replace it with the new filter (b).

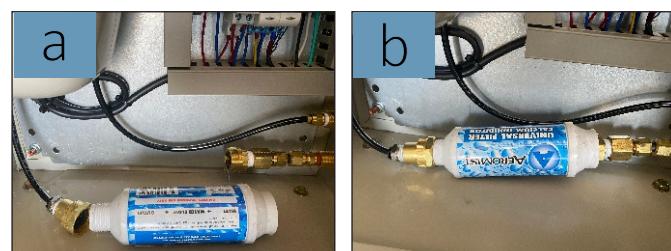

Note:

The Sanitation Booth reinforces the prevention against the spread of the viruses. It does not replace other recommendations such as: washing your hands, using hand sanitizer, healthy distancing, etc.

Warranty:

One year Structural Warranty after the delivery of the Sanitation Booth. Component warranties depend on the specifications of external manufacturers.